

**REVIEW ALL INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING INSTALLATION****GENERAL NOTES:**

- Instructions are intended for trained door systems technicians using proper tools and equipment.



WARNING! – Components under **extreme spring tension** can cause death or serious injury.

- Refer to installation instructions provided with the door or grille and the motor operator.

**INSTALLATION:**

- Gateway Series doors and grilles are intended to open automatically to provide egress as required by building codes. In most cases, the door or grille will fully open, but it must automatically open to a minimum height of 80 inches. Spring tension must be adjusted accordingly.
- Standard “Fail-Safe” function automatically opens the door or grille after an approximate 10 second delay upon power loss, alarm signal, or activation of optional lighted exit button.
- Optional “Fail-Secure” function to hold the door or grille closed during a power loss, but to open automatically upon alarm, activation of lighted exit button, or fire department access station for emergency response. R-BBU battery backup module is required.
- Selectable “Auto-Reclose” function allows door or grille to close automatically once alarm is cleared and power is restored. Monitored sensing edge and/or photo eye, and multi-device adapter if both are used, is required.
- When a grille is provide with optional self-latching mechanisms at each end of the curtain, the cover over the cut-out in each guide may need to be adjusted to allow proper latching.